

Quick-Start

Activating the FixLogger

Ideally, the FixLoggers are switched off with the OFF tag. This saves battery power and the FixLoggers are ready for use more quickly. If the FixLogger is switched off, no more tags (controls) can be read.

- Connect the charging station to the mains adapter or computer using the USB cable
- Insert the FixLogger into the charging station
- As soon as the orange LED flashes briefly and the start melody sounds, the FixLogger is ready for use (The start melody only sounds on the new generation of FixLoggers.)


Perform training form/game

- Read start tag, timing is running (display shows flashing control flag and running time)
- Check controls (hold the tip of the FixLogger in the area of the brackets on the FixTags)
- Check the finish control, after 10 seconds the display shows the checksum (checking the result)
- Call up split times and total time with the touch buttons
- The last display can be called up again within 10 minutes by activating both touch buttons at the same time



Switch off the FixLogger

- Hold the FixLogger on the OFF tag
- Orange LED flashes briefly several times, the text «OFF in 3s» appears on the display
- After three seconds, the display goes out and the FixLogger is switched off

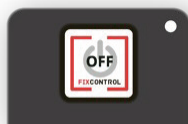

Important notes



When using the FixLogger for the first time after delivery, it must be briefly placed in the charging station.



FixLogger automatically disconnects from the battery if it is not used for a longer period of time, but the FixLogger should still be charged regularly (every six months).



Only charge the FixLogger at temperatures between 0°C and 35°C.



Do not expose the FixLogger to extremely high (>40°C, e.g. direct and strong sunlight) or low temperatures (<-20°C) for long periods of time.

=> See also notes in the manual



Do not bring any metal closer than 1 cm to the FixLogger (self-discharge).